



Airbag System Overview

1 - Airbag unit, driver's side front - Driver side airbag igniter - N95 and N250	6 - N251 , N252 Driver's Curtain airbag unit.
3 - Front Passenger Knee Airbag - N296 , behind glove box	8 - Side Airbag igniter - N199 (driver side), N200 (passenger side)
4 - Airbag unit, passenger side front - Front Passenger's Airbag Igniter - N131 and N132	9 - Rear Passenger Side Airbag igniter - G256 (driver side), G257 (passenger side)
5 - Airbag Control Module - J234 , on transmission tunnel housing	10 and 11 - Rear side airbag Unit - N201 (driver side) and N202 (passenger side)
	12 - Driver Knee Airbag - N295 , above driver's compartment